




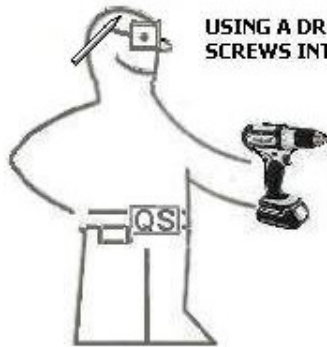

ENSURE YOU HAVE ALL YOUR INSTALL AND SAFETY TOOLS READY

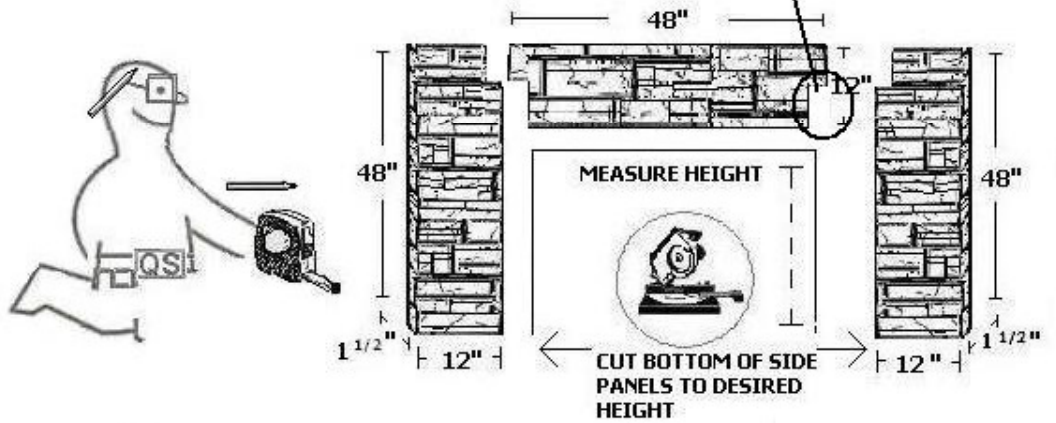

USING A DRILL AND THE SCREWS PROVIDED, PLACE SIX SCREWS INTO EACH PANEL

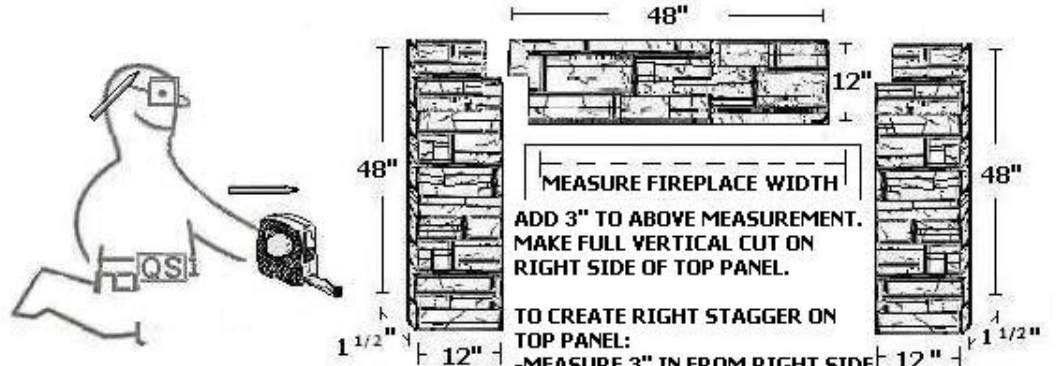