


QUALITY STONE


QUICK INSTALL INSTRUCTIONS




ENSURE YOU HAVE ALL YOUR INSTALL AND SAFETY TOOLS READY

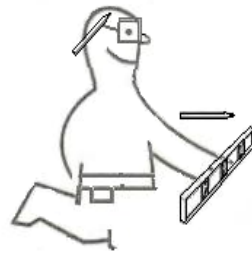


MAKE LEVEL LINE TO FOLLOW

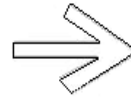


INSTALL STARTER STRIP

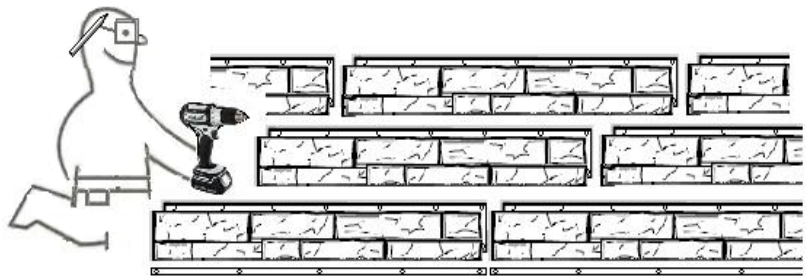

LOCK FIRST ROW OF PANELS ONTO STARTER STRIP, THEN SCREW 3-4 SCREWS IN THE TOP, AND 1-2 IN THE SIDE OF EACH PANEL

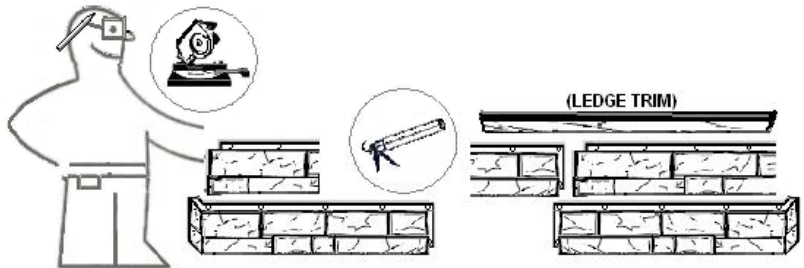

[IF CORNER PANELS ARE BEING USED] FOR EACH ROW, INSTALL THE CORNER(S) FIRST. BE SURE TO MAINTAIN A STAGGER; YOU MAY NEED TO INSERT A CUT PANEL OR MAKE A CUT TO A CORNER PANEL TO FINISH EACH ROW. STONE FINISH IS NEEDED TO COVER SCREW HOLES IF YOU ARE USING EDGE OR LEDGE TRIMS. AND ANY OTHER EXPOSED POLYURETHANE.

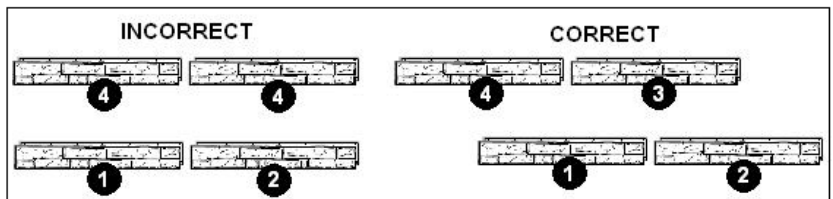

* MAKE SURE TO STAGGER VERTICAL JOINTS

* ALL PANELS ARE NUMBERED - MAKE SURE YOU DON'T REPEAT THE SAME NUMBER PANEL SIDE-BY-SIDE, OR ABOVE AND BELOW